


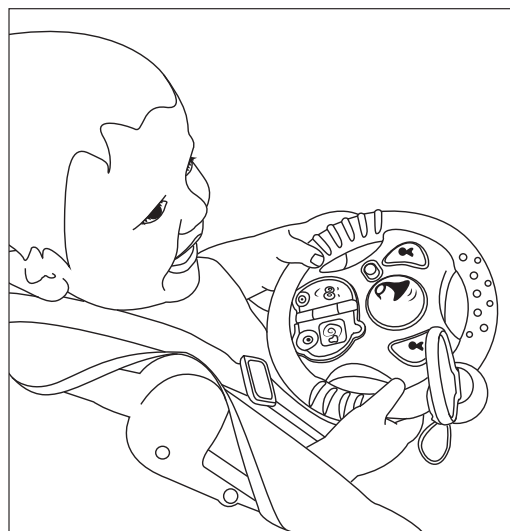

Baby Driver

Owner's Manual

For More Information

If you have any questions or comments about this product, or are missing any of the parts, please contact us in one of the following ways:



(877)-424-4226



info@chiccousa.com



www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601

WARNING

For your child's safety. Please read these instructions and keep for future reference.

To prevent the risk of strangulation: Do not attach strings or straps to the toy.

- Toy must only be used under adult supervision.
- Remove and discard all packaging and packaging fasteners before giving this toy to a child.
- Do not use the product if any components are broken or missing.
- Do not use this product on a car seat.
- Before each use, ensure that the product and all its components are not damaged. If damaged or broken, immediately discard the toy.
- Do not use accessories or replacement parts other than those approved by Chicco.
- Do not use if the attachment device installation interferes with the proper use and adjustment of the strollers restraint system.

Removing and Inserting Batteries

This product uses 2 AAA 1.5 volt batteries. Batteries must only be fitted by an adult. Always keep batteries and tools out of reach of children.

- To replace the batteries: loosen the screw on the battery compartment cover (S, Fig. 2) with a Phillips screwdriver and remove the battery cover. Insert the new batteries; checking to make sure the polarity (+/-) on the batteries matches the markings on the product. Replace the battery compartment cover and secure with the screw.
- Always remove exhausted batteries from the product to avoid damage by possible battery leakage.
- Always remove batteries when the product is not going to be used for long periods of time.
- It is recommended to use alkaline batteries of the same type, in this product.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad) batteries. Do not mix old and new batteries.
- Always dispose of batteries properly.
- Do not short circuit battery terminals.

Cleaning

- Clean the toy with a soft cloth. Do not submerge the toy in water to avoid damaging the electronic circuit.
- Protect the toy against heat, dust, sand, and water.

FCC Informations

Caution: changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

Operating the Toy

- Turn on the toy by moving the slider (N, Fig. 1) at the base of the steering wheel from the 0 (OFF) position to the I (ON) position. Start up will be confirmed by a sound effect. From this moment, all electronic functions will be enabled.

ACTIVITIES:

- BOOK: flipping through the pages of the little book (O, Fig. 1), the child will hear a melody and sound effect which corresponds to the image displayed (police car, fire truck);
- HORN: when the child presses the horn (P, Fig. 1), a sound effect corresponding to the image displayed in the book is produced.
- DIRECTIONAL SIGNALS: every time a directional signal is pressed (Q, Fig. 1) the child will hear the corresponding sound effect;
- STEERING WHEEL: turning the steering wheel right or left, the child activates a melody. If the child continues to turn the steering wheel while the melody is playing, different sound effects will be added to the melody.
- KEY: when the key is turned (R, Fig. 1) a mechanical sound is activated.

Each activity, with the exception of turning the key, is accompanied by various lighting effects. Always switch off the toy when it is not being used. Turn off the toy by moving the slider N to the 0 position.

Figure 1




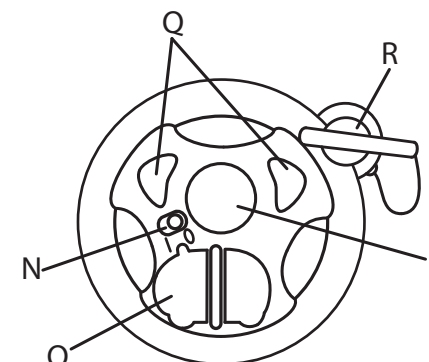



Figure 2

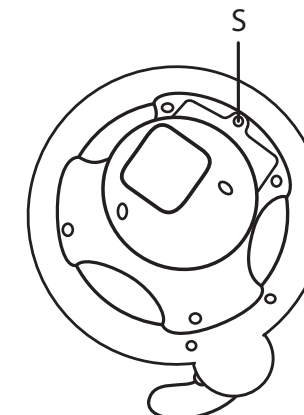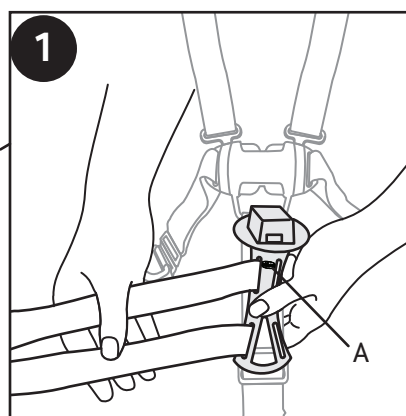



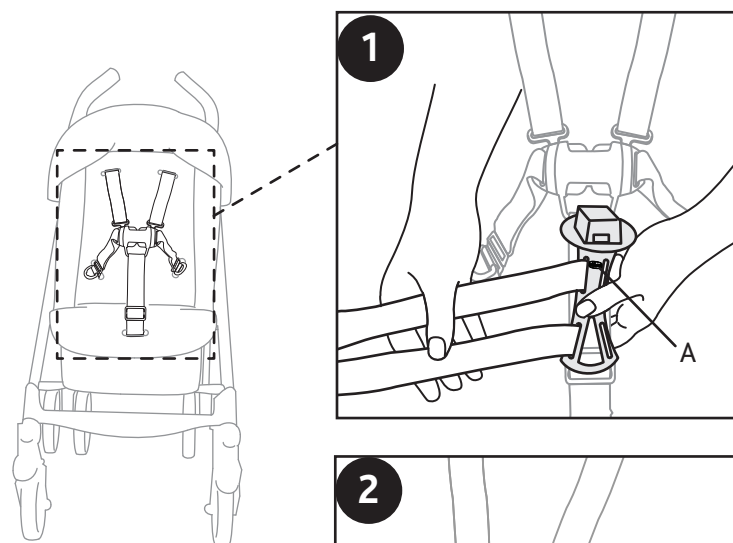


The toy is composed of two parts: a Steering Wheel toy and a Harness Mount that fastens to the stroller's Crotch Belt.


1. To correctly fasten the Harness Mount to the stroller Crotch Belt, position it on the Crotch Belt, making sure the Chicco logo is visible from the front (A).

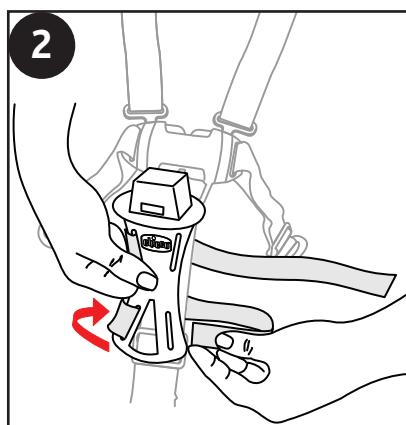

2 & 3. Pass the bottom strap towards the back and around the Crotch Belt, passing it through the front slot on the Harness Mount (3A & 3B).

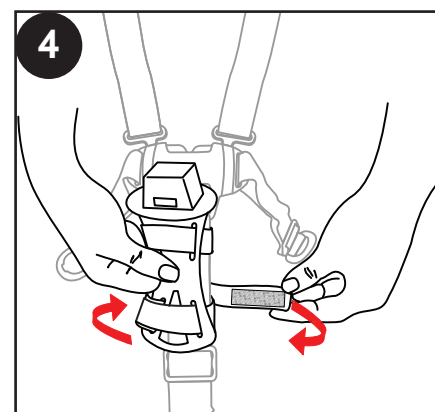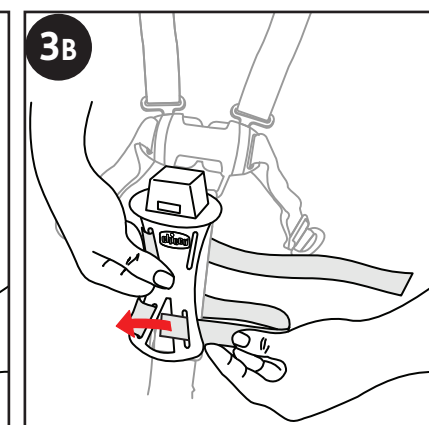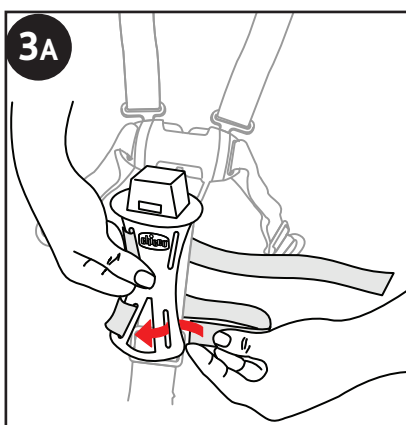


4. Pull using force and wrap the remaining part of the strap around the Harness Mount, securing it with the hook and loop.


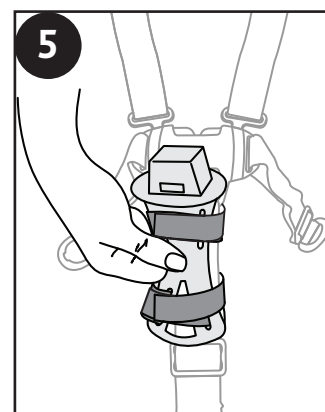


5. Repeat steps 1 - 4 with the top strap. The Harness Mount should be attached as shown.

⚠ WARNING FALL HAZARD: Do not use if the Harness Mount interferes with the proper use and adjustment of the strollers restraint system.

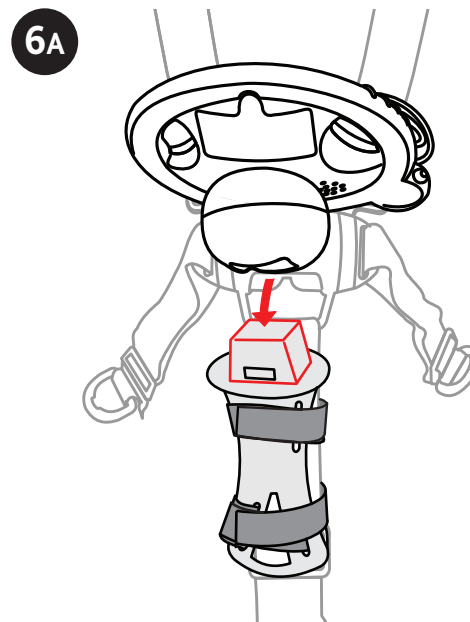

6. Once the Harness Mount is correctly secured as shown in Step 5, position the Steering Wheel on the Harness Mount (6A), until you hear a "click" (6B).

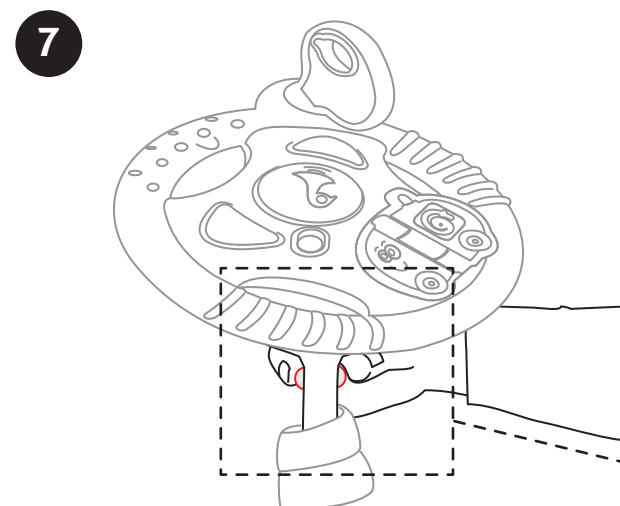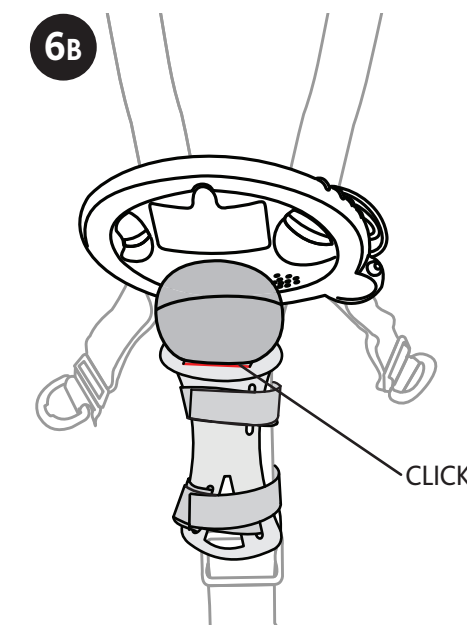

7. To release the Steering Wheel from the Harness Mount, press buttons A and B simultaneously, using both fingers.

